

# 2-Head LED Emergency Light

# **Owners Manual**



LF-2009-LED-40 SUPER BRIGHT LED

Please consult your electrician for hanging fixture and wiring.



Turn off the main power at the circuit breaker before installing or servicing the light fixture to prevent possible injury from electric shock.



Make sure that all wiring conforms to local and local electrical code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections, obtain services of a qualified electrician. Use wire nuts to cap all connections.

Plastic electrical tape is not recommended.





**WARNING:** 

 
To avoid electrical shock turn off power at the fuse or breaker box.



#### **WARNING:**

Wires need to be connected to driver found in canopy and should NOT be connected to power source or a short may occur

### **INSTRUCTIONS:**



#### **IMPORTANT:**

THE BATTERY IN THIS UNIT MAY NOT BE FULLY CHARGED AFTER ELECTRICITY IS CONNECTED TO IT. CHARGE FOR AT LEAST 24 HOURS FOR NORMAL OPERATION TO TAKE EFFECT. TO CHECK, PRESS THE PUSH-TO-TEST SWITCH, THE LIGHT INSIDE THE UNIT SHOULD THEN TURN ON.

## INSTALLATION INSTRUCTIONS FOR J-BOX MOUNTING:

1. Feed The fixture leads through the back plate and connect to AC power (Fig A).









- 2. Connect wires through J-Box and secure with screws.
- 3. Connect battery only after continuous AC power can be provided to the unit (Fig B).
- 4. Align snaps and push housing directly onto main bottom case (Fig C). Apply continuous AC power and press "TEST" button to check the light.


#### INSTALLATION INSTRUCTIONS FOR CONDUIT:

- 1. Secure plate to wall surface. Route wires through hole in conduit flange and make the conduit connections.
- 2. Connect battery only after continuous AC power can be provided to the unit (Fig B).

3. Align snaps and push housing directly onto main bottom case (Fig C). Apply continuous AC power and press "TEST" button to check the light.

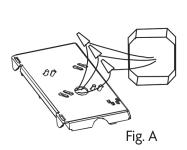

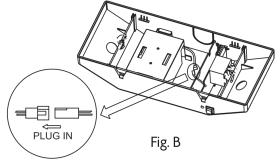

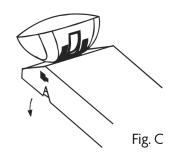

#### **OPERATION:**

During an electrical power failure, the LED lamps will automatically come on for a minimum of 90 minutes.

# **WIRING DIAGRAMS:**

