

Avant Duo Light Fixtures

Owners Manual



24 in. Avant Duo LF-2033-FL



36 in. Avant Duo LF-2034-FL

Please consult your electrician for hanging fixture and wiring.



WARNING:

To avoid electrical shock turn off power at the fuse or breaker box.



WARNING:

 
Wires need to be connected to driver found in canopy and should NOT be connected to power source or a short may occur



Turn off the main power at the circuit breaker before installing or servicing the light fixture to prevent possible injury from electric shock.




Make sure that all wiring conforms to local and national electrical code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections, obtain services of a qualified electrician. Use wire nuts to cap all connections. **Plastic electrical tape is not recommended.**

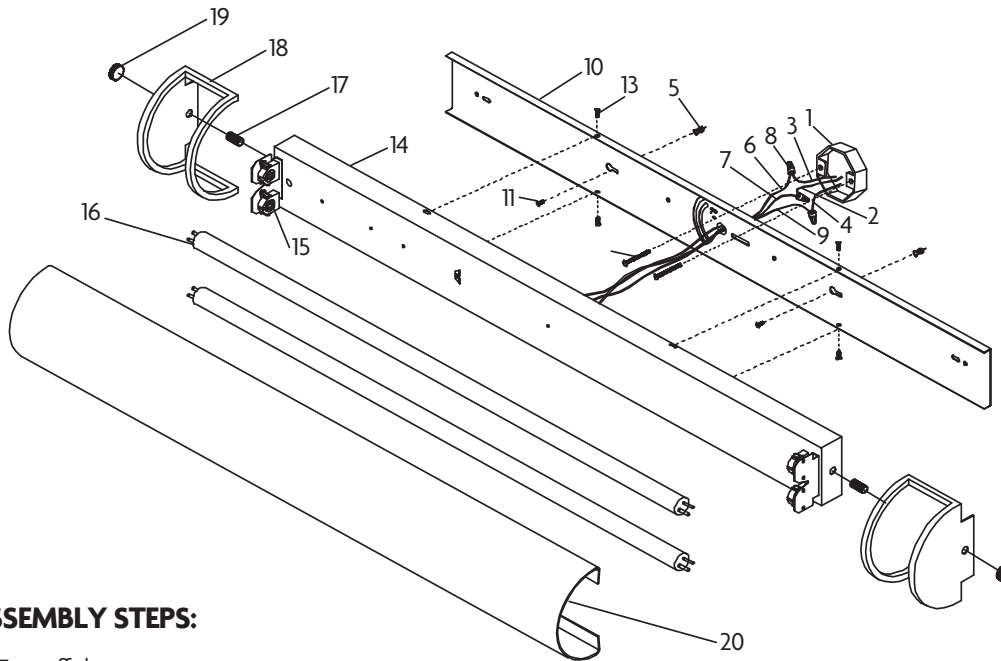


1. OUTLET BOX
2. HOUSE GROUND WIRE
3. WHITE SUPPLY WIRE
4. BLACK SUPPLY WIRE
5. ANCHORS
6. WHITE FIXTURE WIRE
7. FIXTURE GROUND WIRE
8. WIRE CONNECTORS
9. BLACK FIXTURE WIRES
10. BACK PANEL
11. ANCHOR SCREWS
12. MOUNTING SCREWS
13. SCREWS
14. FIXTURE BODY
15. SOCKET
16. LAMP
17. THREADED NIPPLE
18. END CAP
19. DECORATIVE NUT
20. ACRYLIC LENS

ASSEMBLY STEPS:

 1. Turn off the power.
 2. Remove the DECORATIVE NUT (19) from one of the END CAPS (18). Remove the END CAP (18) and the ACRYLIC LENS (20) from the FIXTURE BODY (14).
 3. Pull the SUPPLY WIRES (3) & (4) and HOUSE GROUND WIRE (2) out from the OUTLET BOX (1).
 4. Loosen the 4 screws on two sides of the FIXTURE BODY (14). Then take the BACK PANEL(10) out from the front panel.
 5. Position your fixture over the OUTLET BOX (1). Mark the location of the two KEYHOLE SLOTS located on the FIXTURE BODY (14). Be sure to mark only the narrow parts of the KEYHOLE SLOTS. Remove the FIXTURE BODY (14) from the ceiling. Drill the two holes using the appropriately sized drill bit. Insert the provided CEILING ANCHORS (5) into the holes.
 6. Put all the fixture wires through BACK PANEL (10).
 7. Make the wiring connections: connect the HOUSE GROUND WIRE (2) to the FIXTURE GROUND WIRE (7); using WIRE CONNECTOR (NOT PROVIDED); connect the WHITE SUPPLY WIRE (3)to the WHITE FIXTURE WIRE(6); connect BLACK SUPPLY WIRE (4) to the BLACK FIXTURE WIRE (9) using WIRE CONNECTORS (8). Carefully tuck all wires back into the OUTLET BOX (1).
 8. Carefully tuck all wires back into the OUTLET BOX (1). Locate the BACK PANEL (10) over the OUTLET BOX(1);put the MOUNTING SCREWS(12) through the slots on the back panel. Then secure the mounting screws to the outlet box tightly. Secure the ANCHOR SCREWS (11) to the anchors.
 9. Put the Front Panel over the back panel and secure it by 4 SCREWS (13).
 10. Now you are ready to install the lamp. Do not exceed recommended maximum wattage.
 11. Place the ACRYLIC LENS (20) over the FIXTURE BODY (14).Replace the END CAP (18) onto the FIXTURE BODY (14) and secure it using the DECORATIVE NUT (19).
2. Ballasts in the fixture is accessible and removable by an electrician without cutting of wires and without damage to the housing, trim, decorative elements or the carpentry to which the fixture is attached

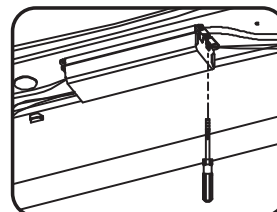

 Use a screw driver to loosen the ballast screw and take it out of fixture pan

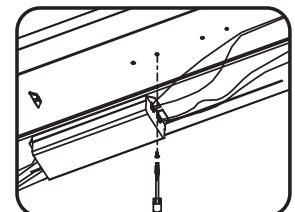

Insert Ballast to the triangle hole and then secure it by the screw on the other end

Wagonway

For more information, visit us at www.wagonway.com